

前言

感谢您购买我们的产品!

重要提示

请认直阅读本说明书

请妥善保管说明书,将产品交给他人使用时,请务必附带本说明书。 请注意所有警告提示并遵守说明书内的所有指令。

请勿将本产品放置在有腐蚀性化学物品的地方,以免产品受到 腐蚀,被腐蚀可能引起产品故障。

- 请用软布、干布清洁本产品。
- 本产品属于精密仪器,请避免使用时掉落、碰撞或承受重击。
- 请勿将本产品放置在温度过高的地方,高温可能导致产品内电池受损
- 需要维修时请联系授权的维修人员。本产品内有精密电子线路。未经 许可擅自拆卸导致故障,不在本司保修范围内,但用户可以付费维修。
- 建议使用原厂线缆。由于使用非原厂附件导致本产品的任何损坏不在 本司保修范围内,但用户可以付费维修。 本产品已经过 ROHS 和CE认证,请参考相关国家标准使用和操作。因
- 使用操作不当而造成机器损坏,不在保修范围内,但用户可以付费维修。 此说明书依据本公司严格测试制定。设计和规格如有变更,恕不另行

设备的规范使用

- 仔细阅读本说明书,特别是"重要提示"部分。
- 在本说明书规定的工作条件下使用和保存本产品。
- 如不按照本说明书使用产品,或不遵守规定的工作或保存条件,将被视 为违规使用。

物品清单: W20RGB 氛围灯 *2 底座 *2 Type-C连接线 *1 用户手册 *1 产品视图: 柔光面板 -产品顶端 功能按键区 产品顶视图 开关键 — 麦克风 切換灯光颜色(适配器供电) (⊚⊚) 屏幕颜色同步灯光 (链接电脑USB口)

- 声音感应灯光模式

 
Type-C供电口

1/4通用螺丝孔

操作说明:

1、W20RGB氛围灯有两种供电方式:5V2A充电头和电脑USB口。

2、将W20RGB的Type-C连接线 插好,USB插头可连接充电宝 或者5V2A充电头。



3、除附带底座外,还可以把灯固定在有1/4螺丝头的三脚架或桌面支架, 或根据需要放置。远离高热和在干燥环境中使用。









4、接上电源后按 ① 开灯,短按 ② 可切换15种不同的RGB灯光。

5、接上电源后按 🕲 开灯,短按 💽 进入声音感应灯光模式,动态灯光根据 周围音乐或声音的大小律动。使用过程中再次按 ① 可以切换不同灯光 效果。将麦克风尽可能靠近声音源,效果更明显。

电脑屏幕颜色同步模式

Top of product -

Instructions

metal housing

1, There are two power supply methods

for the W20 RGB ambiance light.

• 5V2A charger or power bank

- 1、在浏览器通过 www.vloglite.com 进入主页, 在 DOWNLOAD 页面 找到W20RGB点击下载控制程序。或直接输入www-x-vloglite-xcom.img.abc188.com/Upload/download/20230802234308945.zip 按回车键或者使用下载软件下载。
- 2、首先将灯连接电脑USB插口,按 (开灯。一定要先连接灯并开启后 再打开软件,这样软件才能检测到W20RGB。
- 3、打开下载好的curColor文件夹,双击 curColor,exe 启动软件。
- 4、在串口号 COM30 的框内点 ✔ 打开下拉列表,点击选择接入了 W20RGB的电脑USB端口,一般为 COM3/COM4/COM5......。
- 5、在波特率 9600 的框内点 💙 打开下拉列表,点击选择列表末端 数值115200。最后点击打开串口。

软件图示: 第一步点击 选择灯接口



连接成功后灯光颜色跟屏幕同步,跟随屏幕画面变化颜色。

操作要点提示

- 电脑屏幕颜色同步模式,一定要先连接灯并打开,然后才启动软件,否则 无法识别。
- ●串口号每个电脑显示不一样,一般除了COM1和COM30外新增的名称是 连接好的氛围灯,可逐个尝试。
- ●连接成功的话,左下应显示端口已经打开,如果不显示,关闭软件和灯, 重新接入灯然后打开软件, 选择对应参数, 最后点击打开出口。
- ●出现灯光颜色无变化或软件无反应时,可直接拔下灯的接口,重新按 正确步骤连接,启动软件即可。

产品规格:

型号	W20	功率	5W
灯珠	40颗RGB灯珠	电压	5V/1A
颜色	黑色	供电接口	Type-C
材质	PC+铝合金	线长	1 m
尺寸	26.6*3.6*2.8cm	净重	194.7g

保修条款(中文)

本公司对产品提供为期一年的质量保质期。

请保留您原始购买单据及保修卡,确定您购买的供应商资料都在此 单据,同时包括您的购买日期,产品序列号等,这些资料质保服务时都会

质保范围不包括:

- 产品不当使用,破坏,不良或失调的外接装置,不适合的外接装置所 造成的损坏(包括暴露于雨水等损坏),不在质保范围。
- 自购买日30天后产品外观的损伤,或是不当的表面处理接触造成的 外观损失,不在质保范围。

质保无效说明:

- 产品序列号标识已经被撕去或无法辨识,本质保条款无效。
- 产品未经本公司或者指定授权维修公司的检修及改装,本质保条 款无效。

保修卡

产品编号	
产品名称	
购买日期	
用户姓名	
用户电话	
用户地址	
经销商印章	

VLOGLITE Screen Color synchronous ambiance light Compatible only Windows

 
Foreward

Thank you for purchasing

Instructions

- Please read this product manual carefully.
- Keep this product manual. Always include this product manual when passing the products on to third parties.
- Heed all warnings and follow all instructions in this product manual.

M WARNING



- Use only a microfiber and dry cloth for cleaning the product.
- Operate carefully to not cause any damage by dropping or physical shocking it.
- Do not leave the product in excessive heat, high temperatures can cause the product to malfunction.
- Please have the product checked by the authorized service or agent if your product has some problems. Please note that this warranty does not apply to repair arising out of the malfunction of unauthorized disassembly, although you may request such repairs on a chargeable
- Use of original cable accessories is recommended. Please note that thi warranty does not apply to repairs arising out of the malfunction of non-original accessories, although you may
- request such repairs on a chargeable basis
- The product is certificated by RoHS and CE. Please operate the product in full compliance with the operation standards. Please note that this warranty does not apply to repair arising from malfunction, although you may request such repairs on a chargeable basis.
- The instructions and information in this manual are based on thorough, controlled company testing procedures. Further notice will not be given if the design and specifications change.

Intended Use

产品金属外壳

- The user has read the instructions of this manual.
- The user is using the products within the operating conditions and limitations described in this product manual.
- "Improper use" means using the products other than as described in these instructions or under operating conditions which differ from those described herein.

Packing List



Product Overview

Bottom of product

Soft light lampshade -

Top view of the product

(ØØ **0** /



Base *2

Top of product

Function button area

— Switch button

— Microphone



Type - C * 1

 
Changing light colors (use charger or power bank)

Screen color synchronous (Link computer)

—Sound pickup rhythm light mode









Type-C Power supply interface

1/4 Universal screw hole





4, After powering on, press the to turn on W20RGB, and press the **()** start Sound pickup rhythm light mode. Press again to switch different sensing lights. Bring the microphone of the lamp closer to the sound source for

Screen Color synchronous

better results.

• Log in to www.vlogtlite.com to enter the homepage and Click to enter the download page get software .or enter the download address www-x-vloglite-x-com.img.abc188.com/Upload/

• Connect the light to the computer and then press (turn it on. Only when the light is on can the software be start, otherwise it will not be recognized.

• Double click on curColor. exe in the folder to start the software.

Refer to the software diagram for operation.

Step 1: select the name of the connection port for the light in the list. Usually COM3/COM4/COM5.



After successful connection, it will become this line of text

Precautions for operation

- Connect the light to the computer, turn it on, and start the software, otherwise it may not be recognized.
- After successful connection, press (a) to synchronize the lighting with the overall color of the computer screen
- Unable to connect successfully, try selecting a different serial port number COM4 COM5.Or turn off the lights and software, unplug and reconnect, and repeat the above steps to try again

Product Specification:

Model	W20	Power	5W
LED Beads	RGB beads 40pcs	Voltage	5V/1A
Color	Black	Charge Port	Type-C
Material	PC+Aluminum	Line	1 m
Product Size	26.6*3.6*2.8cm	Net	194.7g

Service Warranty (EN)

We offer one-year product warranty

Keep your original sales receipt. Be sure the dealer has written on it the date, serial No. of the product. This information is required for warranty service.

This warranty does not cover:

- Damage that is the result of misuse, abuse, accident (including but not) limited to damage by water), faulty connection, defective or maladjusted associated equipment, or the use of the product with equipment for which
- Cosmetic defects that appear more than thirty (30) days after the date of purchase. Cosmetic damage caused by improper handling is also excluded.

This warranty is void if:

- The product dentification or serial No. label is removed or defaced in anyway.
- The product is serviced or repaired by any one other than or anauthorized dealer or sorice agency.

GUARANTEE CARD

Serial No.	
Item Name	
Purchase Date	
Buyer Name	
Buyer Phone	
Buyer Add	
Franchiser Seal	